



# BD系列电力变送器

Series BD electric transmitters

## 安装使用说明书

Installation and Operation Instruction

总部: 上海安科瑞电气有限公司  
Headquarter: Shanghai Acrel Co., Ltd.  
地址: 上海市嘉定区嘉坊桥洪德路99号  
Add: No. 99 Hongde Road, Zong Fang Qiao,  
Jiading District, Shanghai  
Tel: (86) 21-59104850 59104851  
Fax: (86) 21-59104852  
服务热线Service Hot Line: 800-820-6632  
Http: //www.acrel.cn E-mail: ACREL001@vip.163.com  
PC: 201801

生产基地: 江苏安科瑞电器制造有限公司  
Production Base: Jiangsu Acrel Appliance Manufacture Co., Ltd.  
地址: 江阴市南闸镇东盟工业园区东盟路5号  
Add: 5 Domeng Road Dongmeng Industrial Park Nanzha town Jiangyin  
Tel: (86) 0510-86179966 86179967 86179968  
Fax: (86) 0510-86179975  
PC: 214405  
E-mail: JY-ACREL001@vip.163.com

上海安科瑞电气有限公司  
Shanghai Acrel Co., Ltd.

# 申明 DECLARATION

版权所有，未经本公司之书面许可，此手册中任何段落，章节内容均不得被摘抄、拷贝或以任何形式复制、传播，否则一切后果由违者自负。本公司保留一切法律权利。

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical photocopying, recording, or otherwise without prior permission of Acrel. All rights reserved.

本公司保留对本手册所描述之产品规格进行修改的权利，恕不另行通知。订货前，请垂询当地代理商以获悉本产品的最新规格。

This company reserve power of revision of product specification described in this manual, without notice. Before ordering, please consult local agent for the latest specification of product.

# 目录 CONTENTS

1 概述 General	1
2 型号说明 Type explanation	1
3 通用技术条件 General technical condition	2
4 产品型号 Type of products	3
4.1 电流、电压变送器 Current, voltage transmitters	3
4.2 三相电流、电压变送器 Three-phase current, voltage transmitters	4
4.3 功率变送器 Power transmitters	5
4.4 功率因数变送器 Power factor transmitters	6
4.5 频率变送器 Frequency transmitters	7
4.6 多电量数字变送器 Multi-electrical parameters digital transmitters	8
4.6.1 操作指南 Operating guide	9
4.6.1.1 查看状态 View Status	9
4.6.1.2 操作字符说明 Operation character Description	9
4.6.1.3 系统设置模式 System setting mode	10
4.6.2 通讯指南 Communication guide	12
4.6.2.1 通讯 Communication	12
4.6.2.2 MODBUS协议简述 MODBUS protocol compendium	12
4.6.2.3 查询-回应周期 Query- respond period	13
4.6.2.4 传输方式 Transmission mode	14
4.6.2.5 协议 Protocol	14
4.6.2.6 错误检测的方法 Method to create error check code (CRC)	17
4.6.2.7 通讯应用格式详解 Communication apply format expound	19
4.6.2.8 多电量组合变送器的应用细节及参量地址表 Rpplication details and parameter Address table of combined multiple electric parameters transmitter	21
5 接线实例 Connection example	27
5.1 BD-AI 接线实例 BD-AI Connection example	27
5.2 BD-3I3 接线实例 BD-3I3 Connection example	28
5.3 BD-3V3 接线实例 BD-3V3 Connection example	29
5.4 BD-PF 接线实例 BD-PF Connection example	30
5.5 BD-4P 接线实例 BD-4P Connection example	31
5.6 BD-4E 接线实例 BD-4E Connection example	32

### 1 概述 **General**

BD系列电力变送器是一种将电网中的电流、电压、频率、功率因数等电参量，经隔离变送成线性的直流模拟信号或数字信号装置。产品符合GB/T13850-1998、IEC-688标准。

Series BD electric transmitters is a device which can isolate and transmit electric parameters, such as current, voltage, frequency, power, power factor, into linear DC analog signal or digital signal. It meet the requirements of National standard GB/T13850-1998, IEC-688.

### 2 型号说明 **Type explanation**

BD - □ □ □ □ □	辅助代号, 表示输出路数 Auxiliary code, showing numbers of output way	4Q — 三相四线无功功率 3-phase 4-wire reactive power
□	1 — 单路输出, 省略 Single-way output, omitted	3P/Q/I — 三相三线有功功率/无功功率/电流组合变送器 3-phase 3-wire active power/reactive power/current combination transmitters
□	2 — 双路输出 Double-way output	4P/Q/I — 三相四线有功功率/无功功率/电流组合变送器 3-phase 4-wire active power/reactive power/current combination transmitters
□	3 — 三路输出 Three-way output	3E — 三相三线有功电度 3-phase 3-wire active electric energy
	功能代号: Function code:	3RE — 三相三线无功电度 3-phase 3-wire reactive electric energy
	AI — 单相交流电流 Single phase AC current	4E — 三相四线有功电度 3-phase 4-wire active electric energy
	DI — 单相直流电流 Single phase DC current	4RE — 三相四线无功电度 3-phase 4-wire reactive electric energy
	AV — 单相交流电压 Single phase AC voltage	PF — 功率因数 Power factor
	DV — 单相直流电压 Single phase DC voltage	F — 频率 Frequency
	3I — 三相电流 Three phase current	TR — 三相四线有功功率 3-phase 4-wire active power
	3V — 三相电压 3-phase 3-wire voltage	
	4V — 三相四线电压 3-phase 4-wire voltage	
	3P — 三相有功功率 3-phase 3-wire active power	
	3Q — 三相无功功率 3-phase 3-wire reactive power	
	4P — 三相四线有功功率 3-phase 4-wire active power	
		RTD

— 电力变送器  
Electric transmitters

### 3 通用技术条件 **General technical condition**

技术参数 Technical parameters	指标 Value
精度等级 Accuracy class	0.5, 0.2
标称值 Nominal value	电流 (Current) AC, DC 1A、5A; 电压 (Voltage) AC, DC 100V、300V、500V等
过载 Overload	持续1.2倍, 瞬时电流10倍/5秒; 瞬时电压2倍/30秒 Continual 1.2 times, Instantaneous current 10 times/5s; Instantaneous voltage 2 times/30s
输入 Input	
吸收功率 Consumption	≤0.3VA (电流输入 Current input); 电压输入 Voltage input, ≤0.3VA (100V时), ≤0.6VA (300V时), ≤1VA (500V时)
频率 Frequency	50±5Hz, 60±5Hz
标称值 Normal value	4~20mA, 0~20mA, 0~5V, 0~10V等 (And so on)
负载电阻 Load resistance	电流输出时 (Current output) ≤600Ω 电压输出时 (Voltage output) ≥1000Ω
纹波含量 Ripple content	<0.5%峰值 (peak value)
响应时间 Response time	≤400ms
电源 Power supply	
电压 Voltage	AC, DC 85~270V
功耗 Consumption	交流电流, 电压类 (AC current, voltage) ≤3VA, 功率类 (Power) ≤4VA
绝缘电阻 Insulation resistance	≥100MΩ
耐压强度 Isolation voltage	输入 // 输出 // 电源之间 (Among input // output // power supply) 2.0kV/1min, 50Hz
温度系数 Temperature modulus	≤100ppm/°C
温度 Temperature	工作 (Work): -10°C~+55°C 存储 (Storage): -25°C~+70°C
环境 Environment	
湿度 Humidity	≤90%RH, 不结露, 无腐蚀性气体场所 (In the place without dew and corrosive gas)
海拔 Altitude	≤2000 m
安装方式 Fix mode	TS35 导轨, 或用螺钉固定柜体上 (Rail, or fix to cubicle with bolt)


**4 产品型号 Type of products**

- 4.1 电流、电压变送器
- 用途  
测量电流、电压信号，隔离变送输出模拟信号。
- 产品规格  
BD-AI 交流电流变送器  
BD-DI 直流电流变送器  
BD-AV 交流电压变送器  
BD-DV 直流电压变送器

注：BD-AI/T、BD-AV/T采用真有效值测量电路，可对各种正弦或非正弦波正确测量。

Note: BD-AI/T, BD-AV/T adopts effective value measuring circuit, and can measure various sine wave or non-sine wave correctly.

■ 外形尺寸

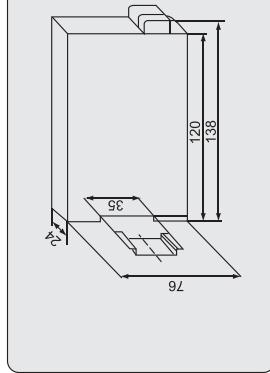

■ Outline dimension



■ 接线方式



AC, DC 85~270V辅助电源  
Auxiliary power supply



三相三线  
Three-phase 3-wire



三相四线  
Three-phase 4-wire

■ 订货范例


例 型 号：BD-AI  
辅助电源：AC220V/50Hz  
输 入：5A  
输 出：4~20mA

Order example  
E. g. Type: BD-AI  
Auxiliary power supply: AC220V/50Hz  
Input: 5A  
Output: 4~20mA

4.2 三相电流、电压变送器

- 用途  
测量三相电流、电压信号，隔离变送输出三路模拟信号。
- 产品规格  
BD-3I3 三相电流变送器  
BD-3V3 三相三线电压变送器  
BD-4V3 三相四线电压变送器

■ 外形尺寸

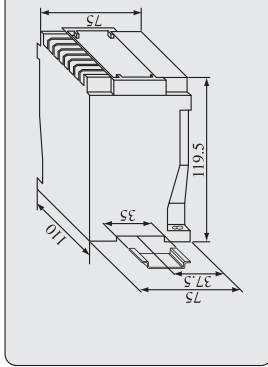

■ Outline dimension



■ 接线方式

电流变送器  
Current transmitters



AC, DC 85~270V辅助电源  
Auxiliary power supply



三相三线  
Three-phase 3-wire



三相四线  
Three-phase 4-wire

电压变送器  
Voltage transmitters



AC, DC 85~270V辅助电源  
Auxiliary power supply



三相三线  
Three-phase 3-wire



三相四线  
Three-phase 4-wire



三相四线  
Three-phase 4-wire

■ 订货范例

例 型 号：BD-3I3  
辅助电源：AC220V/50Hz  
输 入：5A  
输 出：三路4~20mA

Order example  
E. g. Type: BD-3I3  
Auxiliary power supply: AC220V/50Hz  
Input: 5A  
Output: 3-channel 4~20mA

4.3 功率变送器


■ 用途

能测量有功功率，无功功率，隔离变送输出模拟信号。


■ 产品规格

- BD-3P 三相三线有功功率变送器
- BD-3Q 三相三线无功功率变送器
- BD-3P/Q/I 三相三线有功功率/无功功率/电流组合变送器
- BD-4P/Q/I 三相四线有功功率/无功功率/电流组合变送器
- BD-4P 三相四线有功功率变送器
- BD-4Q 三相四线无功功率变送器

■ 外形尺寸

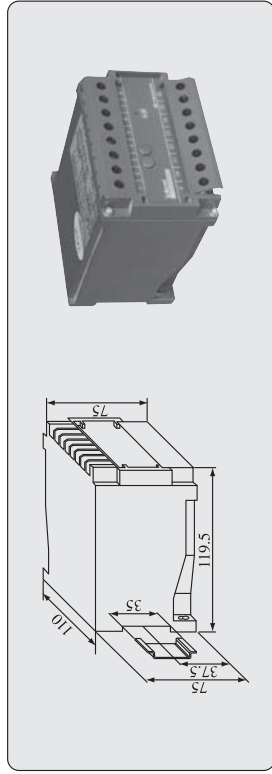

■ 接线方式

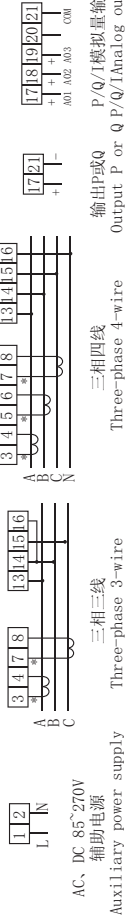

■ 订货范例

例 型号: BD-3P  
 辅助电源: AC220V/50Hz  
 输入: 电流5A 电压100V 功率 866W  
 输出: 4~20mA 对应0 ~ 866W

4.4 功率因数变送器


■ 用途

用于测量单、三相系统的功率因数，经隔离变换成直流信号输出，供远动装置，计算机，自动化控制系统作信息输入，广泛应用于电力系统场合。


■ 产品规格

BD-PF

■ 外形尺寸

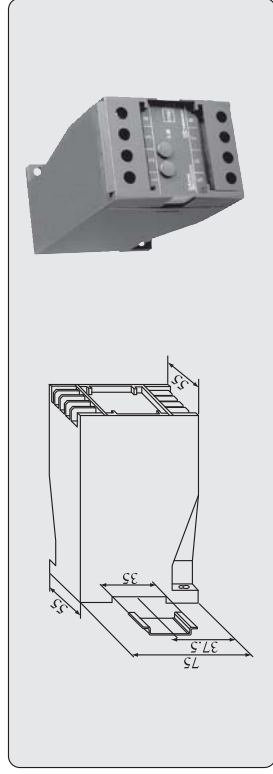

■ 接线方式 / Wiring

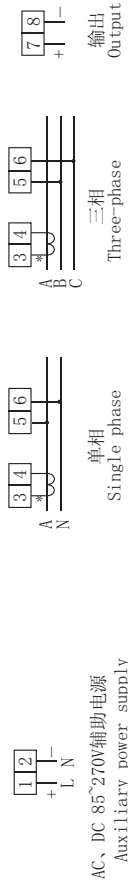

■ 订货范例


例 型号: BD-PF  
 辅助电源: 220V/50Hz  
 输入: 电流5A 电压100V 功率 866W  
 输出: 4~20mA 对应0 ~ 1

4.5 频率变送器

■ 用途  
可测量工频频率，将频率转换为线性输出的直流信号，隔离输送给远动装置、计算机、巡检等。

■ 产品规格  
BD-F

■ 外形尺寸

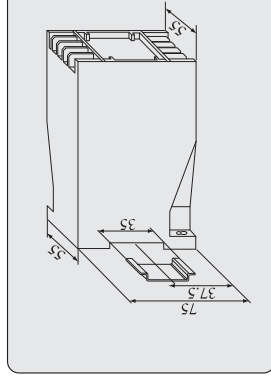

■ Outline dimension



■ 接线方式



AC, DC 85~270V辅助电源也可信号供电  
Power supply or power supply by signal



输入  
Input



输出  
Output

■ 订货范例

例 型 号: BD-F  
辅助电源: 220V/50Hz  
输 入: 100V  
输 出: 4~20mA 对应45~55 Hz

■ Order example

E. g. Type: BD-F  
Auxiliary power supply: 220V/50Hz  
Input: 100V  
Output: 4~20mA


Corresponds 45~55 Hz

4.6 多电量数字变送器

■ 用途  
将电力系统中的电量转换成高线性比例输出的脉冲量。该变送器带RS485通讯接口，采用Modbus协议，可输出三相电流、电压、有功功率、无功功率、频率、功率因数、有功电度、无功电度等数字量，1~4路模拟量可选，两路电能脉冲输出。

■ 产品规格  
BD-3E 三相三线多电量数字变送器  
BD-4E 三相四线多电量数字变送器  
BD-4EA 组合式多功能电力仪表

■ 外形尺寸

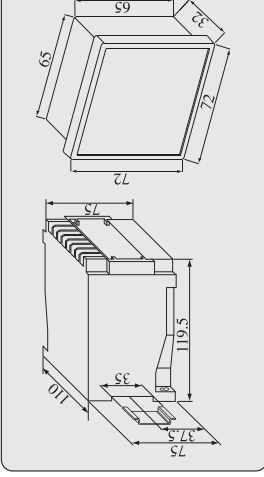

■ 接线方式



AC, DC 85~270V辅助电源  
Auxiliary power supply



三相三线  
Three-phase 3-wire



三相四线  
Three-phase 4-wire



RS485 通讯  
RS485 Communication



电能脉冲  
Electric energy pulse

模拟变送输出  
Analog transmitting output

4路变送输出对应关系4-channel transmitting output corresponding relation

变送输出 Transmitting output	测量对象 Measuring object	对应关系 Corresponding relation
A01	P	4~20mA 对应 0~866W
A02	Q	4~20mA 对应 0~866var
A03	Ia	4~20mA 对应 0~5A
A04	PF	4~20mA 对应 0~1

■ 订货范例

例 型 号: BD-3E  
辅助电源: 220V/50Hz  
输入: 电流5A 电压100V 功率 866W  
输出: 40000脉冲 / kWh

■ Order example

E. g. Type: BD-3E  
Auxiliary power supply: 220V/50Hz  
Input: Current/5A Voltage/100V Power/866W  
Output: 40000 pulse / kWh

注: BD-4EA组合式多功能电力仪表主要适用于GCK、GCS、MNS等低压抽屉柜的出线回路中，特别是断路器元件排列较为紧凑的场所，产品信号采集处理部分(即BD-4E)和显示器件集成在内部导板上，显示器件安装在柜体面板上。功能与ACR2001一致。  
Note: DT 80-F single-phase active electric energy meters are mainly suitable in the outlet circuits of low voltage draw-out cubicles such as GCK, GCS, MNS etc., particularly used for position with electrical components layout in more compact circuit. It consists of BD-4E for acquiring and treating displays. BD-4E is mounted onto the inner guide rail, the display is mounted onto the face plate of cubicle. Its function is identical with that of ACR2001.

4.6 Multi-electrical parameters digital transmitters

■ Usage  
Transmit kWh value of electric power system into high linear pulse. It has RS485 communication interface, adopts Modbus protocol, and exports three-phase current, voltage, active power, reactive power, frequency, power factor, active energy, reactive energy and so on. 5. 1~4 channel analog optional, two channel electric energy pulse output.

■ Specification  
BD-3E Three-phase 3-wire Multi-electrical parameters digital transmitters  
BD-4E Three-phase 4-wire Multi-electrical parameters digital transmitters  
BD-4EA Combined multi-functional power meters

■ Outline dimension



■ Wiring



三相四线  
Three-phase 4-wire



RS485 通讯  
RS485 Communication

4路变送输出对应关系4-channel transmitting output corresponding relation

变送输出 Transmitting output	测量对象 Measuring object	对应关系 Corresponding relation
A01	P	4~20mA 对应 0~866W
A02	Q	4~20mA 对应 0~866var
A03	Ia	4~20mA 对应 0~5A
A04	PF	4~20mA 对应 0~1

■ Order example

E. g. Type: BD-3E  
Auxiliary power supply: 220V/50Hz  
Input: Current/5A Voltage/100V Power/866W  
Output: 40000 pulse / kWh



4.6.1 多电量数字变送器操作指南

依照说明正确接线后，接通工作电源即进入测量状态。

4.6.1.1 查看状态（查看电流、电压、功率和电度和频率）

在测量状态下，单击相应功能键可以依次切换查看：电压V、频率、电流I、功率PQS、功率因数、开关量输入/出状态、有功电度Ep和无功电度Eq及时间。

- 电压显示一次侧值，单位为V，当一次测电压达到预定界限，显示单位转换为kV。
- 电流显示一次侧值，单位为A，当一次测电压达到预定界限，显示单位转换为kA。
- 功率显示一次侧值，有功功率单位为W，无功功率单位为Var，当功率值达到预定界限，显示单位转换为kW或者MW和kVar或者MVar，当接线方式为三相四线时，如果出现某相有功功率或功率因数为负值，则有可能该相电流进线与出线接反。

■ 显示电度为二次侧值，电度显示的单位固定为kWh，当显示电度时，显示两位小数，即精确到0.01 kWh。

4.6.1 Multi-electrical parameters digital transmitters operating guide

After as per description and correct connection, switching-on working power supply, then enter the measuring condition.

4.6.1.1 View Status (View current, voltage, power and electric energy and frequency)

Under measuring condition click corresponding function key, switching View orderly: voltage V, frequency, current I, power PQS, power factor, switching input/output status, active electric energy Ep and reactive electric energy Eq and time.

- voltage display primary side value, unit: V, when primary side voltage reached preset bound, display unit convert as kV.
- current display primary side value, unit: A, when primary side current reached preset bound, display unit convert as kA.
- power display primary side value, active power unit: W, reactive power unit: Var, when power value reached preset bound, display unit convert as kW or MW and kVar or MVar, when connection mode as four wire three phase, if active power or power factor of one phase is negative value, it is possible that connection of current inlet and outlet of this phase is just reversal.
- display electric energy as secondary side value, electric energy display unit only as kWh, when display electric energy, it should be expressed with two decimal points, i.e. with accuracy to 0.01 kWh.

4.6.1.2 操作字符说明

Character	Textual description	Character	Textual description
PASS	密码 Password	InCt	电流网络 Current network
Addr	地址 Address	In-I	输入电流范围 Input current range
bAUd	波特率 Baud rate	Ct	电流倍率 Current magnification
UnEt	电压网络 Voltage network	tr-x(x=1,2,3,4)	变送输出设置 Transmitting output setting
L3.3	三相三线 Three phase three wire	SYS	系统设置 System setting
L3.4	三相四线 Four wire three phase	Code	设置密码 Setting password
In-U	输入电压范围 Input voltage range	Clr.E	电能清零 Electric energy zero clearing
Pt	电压倍率 Voltage magnification		

4.6.1.2 Operation character Description

4.6.1.3 系统设置模式

a) 进入/退出系统设置模式

在正常情况下，仪表处于正常工作状态，同时按下SET键，再按回车键会进入系统设置模式，进入系统设置模式前，首先需要输入正确的密码PASS（出厂时一般设置为0001）。

输入密码的方法为：

- (1) 按SET键，再按回车键进入输入密码状态；
- (2) 按左右方向键减小或增大数值大小至正确的密码(可以同时按左或右方向键+回车键即可实现对百或十位数字的减小或增大)；

(3) 按回车键确认数据进入系统设置模式。如果密码输入正确，即进入系统设置模式。仪表出厂时默认的密码设置为0001。在系统设置模式下，任何时候连续单击SET键都能退出系统设置模式并询问是否保存设置（按回车键保存，再按SET键不保存，按其他键继续设置）后返回到测量状态。

系统设置模式下的操作  
系统设置模式下，SET键用来返回上级菜单，左右键用来切换设置的项目或者改变需要设置的内容，回车键用来确认需要设置的项目。系统设置模式下主要有以下设置项目：通讯地址及波特率设置(Addr, bAUd)，输入信号状况设置，变送输出设置(tr~I~tr-4)，密码(Code)及清零(Clr.E)设置(SYS下)。

4.6.1.3 System setting mode

a) Enter/Exit system setting mode

Under normal condition, meter is in normal working condition, press down SET and ENTER, will enter system setting mode, before enter system setting mode, firstly, enter correct password PASS (generally, the deliver setting is 0001).

Method of enter password:

- (1) press SET, then press ENTER again to enter pressing password condition;
- (2) press left/right direction key, decrease/increase number up to correct PASSWORD (Press down left/right direction key+ENTER key at the same time can implement decrease/increase the hundreds' digit/tens digit number);

(3) Press ENTER, to confirm data entered system setting mode.

- If pressing correct password, then enter system setting mode.
- Meter's deliver default password setting is 0001.
- Under system setting mode, at any time, click SET continuously, can exit system setting mode and inquire: save setting? (press ENTER to save, and press SET for Don't Save, press other key to continue setting) then return to measuring condition.
- Under system setting mode, each item is stored in storage, after successful setting, before next setting, it is always valid.

b) Operation under system setting mode

Under system setting mode, SET key is used for return to previous menu, left key and right key is used for switching setting item or changing the content to be setting, ENTER is used for confirm the item to be setting. System setting mode have following primary setting items: Communication Address setting and Baud rate setting (Addr, bAUd), input signal condition setting, transmitting output setting (tr~I~tr-4), password (Code) and zero clearing (Clr.E) setting (SYS).

4.6.1 多电量数字变送器操作指南

依照说明正确接线后，接通工作电源即进入测量状态。

4.6.1.1 查看状态（查看电流、电压、功率和电度和频率）

在测量状态下，单击相应功能键可以依次切换查看：电压V、频率、电流I、功率PQS、功率因数、开关量输入/出状态、有功电度Ep和无功电度Eq及时间。

- 电压显示一次侧值，单位为V，当一次测电压达到预定界限，显示单位转换为kV。
- 电流显示一次侧值，单位为A，当一次测电压达到预定界限，显示单位转换为kA。
- 功率显示一次侧值，有功功率单位为W，无功功率单位为Var，当功率值达到预定界限，显示单位转换为kW或者MW和kVar或者MVar，当接线方式为三相四线时，如果出现某相有功功率或功率因数为负值，则有可能该相电流进线与出线接反。

- 显示电度为二次侧值，电度显示的单位固定为kWh，当显示电度时，显示两位小数，即精确到0.01 kWh。

4.6.1 Multi-electrical parameters digital transmitters operating guide

After as per description and correct connection, switching-on working power supply, then enter the measuring condition.

4.6.1.1 View Status (View current, voltage, power and electric energy and frequency)

Under measuring condition click corresponding function key, switching View orderly: voltage V, frequency, current I, power PQS, power factor, switching input/output status, active electric energy Ep and reactive electric energy Eq and time.

- voltage display primary side value, unit: V, when primary side voltage reached preset bound, display unit convert as kV.
- current display primary side value, unit: A, when primary side current reached preset bound, display unit convert as kA.
- power display primary side value, active power unit: W, reactive power unit: Var, when power value reached preset bound, display unit convert as kW or MW and kVar or MVar, when connection mode as four wire three phase, if active power or power factor of one phase is negative value, it is possible that connection of current inlet and outlet of this phase is just reversal.
- display electric energy as secondary side value, electric energy display unit only as kWh, when display electric energy, it should be expressed with two decimal points, i.e. with accuracy to 0.01 kWh.

4.6.1.3 系统设置模式

a) 进入/退出系统设置模式

在正常情况下，仪表处于正常工作状态，同时按下SET键，再按回车键会进入系统设置模式，进入系统设置模式前，首先需要输入正确的密码PASS（出厂时一般设置为0001）。

输入密码的方法为：

- (1) 按SET键，再按回车键进入输入密码状态；
- (2) 按左右方向键减小或增大数值大小至正确的密码(可以同时按左或右方向键+回车键即可实现对百或十位数字的减小或增大)；
- (3) 按回车键确认数据进入系统设置模式。

■ 如果密码输入正确，即进入系统设置模式。

■ 仪表出厂时默认的密码设置为0001。

■ 在系统设置模式下，任何时候连续单击SET键都能退出系统设置模式并询问是否保存设置（按回车键保存，再按SET键不保存，按其他键继续设置）后返回到测量状态。

■ 系统设置模式下的各项目都被存储在存储器中，一旦设置成功，再次设置前，一直有效。

b) 系统设置模式下的操作

系统设置模式下，SET键用来返回上级菜单，左右键用来切换设置的项目或者改变需要设置的内容，回车键用来确认需要设置的项目。系统设置模式下主要有以下设置项目：通讯地址及波特率设置(Addr, bAUd)，输入信号状况设置，变送输出设置(tr~I~tr-4)，密码(CoDE)及清零(Cl.r.E)设置(SYS下)。

4.6.1.3 System setting mode

a) Enter/Exit system setting mode

Under normal condition, meter is in normal working condition, press down SET and ENTER, will enter system setting mode, before enter system setting mode, firstly, enter correct password PASS (generally, the deliver setting is 0001).

Method of enter password:

- (1) press SET, then press ENTER again to enter pressing password condition;
- (2) press left/right direction key, decrease/increase number up to correct password (Press down left/right direction key+ENTER key at the same time can implement decrease/increase the hundreds' digit/tens digit number);
- (3) Press ENTER, to confirm data entered system setting mode.

■ If pressing correct password, then enter system setting mode.

■ Meter's deliver default password setting is 0001.

■ Under system setting mode, at any time, click SET continuously, can exit system setting mode and inquire: save setting? (press ENTER to save, and press SET for Don't Save, press other key to continue setting) then return to measuring condition.

■ Under system setting mode, each item is stored in storage, after successful setting, before next setting, it is always valid.

b) Operation under system setting mode

Under system setting mode, SET key is used for return to previous menu, left key and right key is used for switching setting item or changing the content to be setting, ENTER is used for confirm the item to be setting. System setting mode have following primary setting items: Communication Address setting and Baud rate setting (Addr, bAUd), input signal condition setting, transmitting output setting (tr~I~tr-4), password (CoDE) and zero clearing (Cl.r.E) setting (SYS).

4.6.1.2 操作字符说明

Character	Textual description	Character	Textual description
PASS	密码 Password	InCt	电流网络 Current network
Addr	地址 Address	In-I	输入电流范围 Input current range
bAUd	波特率 Baud rate	Ct	电流倍率 Current magnification
UnEt	电压网络 Voltage network	tr~x(x=1,2,3,4)	变送输出设置 Transmitting output setting
L3.3	三相三线 Three phase three wire	SYS	系统设置 System setting
L3.4	三相四线 Four wire three phase	CoDE	设置密码 Setting password
In-U	输入电压范围 Input voltage range	Cl.r.E	电能清零 Electric energy zero clearing
Pt	电压倍率 Voltage magnification		



c) 变送输出设置

模拟变送输出可将电网中常见的26个电量(UA、UB、UC、UAB、UBC、UCA、UA、IB、IC、PA、PB、PC、P总、QA、QB、QC、Q总、SA、SB、SC、S总、PFA、PFB、PFC、PF、F)中的其中最多四个量隔离变送输出为4~20mA的直流信号。

c) Transmitting output setting

For common grid 26 electric parameters (UA、UB、UC、UAB、UBC、UCA、IA、IB、IC、PA、PB、PC、P total、QA、QB、QC、Q total、SA、SB、SC、S total、PFA、PFB、PFC、PF、F), the analog transmitting output can mostly isolate 4 items to transmit output DC signal of 4~20mA.

显示 Display	意义 Meaning
9	10tr-2 11 12
tr-1	tr-3 tr-4
	Transmit setting symbol and ordinal numeral

左起第一位为变送选择, 如果是4~20mA输出, 则为1; 第二、四位为变送量的选择, 01代表UA, 02代表UB, .....26代表频率 (即将上面提到的26个电量按顺序1~26进行排序)

The first left bit is transmitting selection, 4~20mA output =1; the third, the fourth bit is transmitting quantity selection, 01 represent UA, 02represent UB, .....26 represent frequency (Sort above 26 electric parameters as sequence 1~26)

5000	5000 5000 5000
------	----------------

20mA对应显示值, 取最高四位整数(小数点忽略)不足补0。例如电流600A/5A, 则当600A对应20mA时, 该值设为6000; 若要设置功率时, 如10kV/100V, 600A/5A, 三相四线, 则100%功率为 $10kV \times 600A \times \sqrt{3} = 1039.2kW$ , 则该值为1039; 若三相三线则为 $10kV \times 600A \times \sqrt{3} = 1039.2kW$ , 该值设为1039 20mA corresponding to displayed value, take highest four-digit integers (ignoring decimal point) with 0 occupy lacking bit. Example: current 600A/5A, when 600A corresponding to 20mA, setting=6000; For setting power, as 10kV/100V, 600A/5A, four wire three phase, then 100% power is  $10kV \times 600A \times \sqrt{3} = 1039.2kW$ , Value=1039; For three phase three wire then  $10kV \times 600A \times \sqrt{3} = 1039.2kW$ , Value=1039

4. 6. 2 多电量数字变送器通讯指南

4. 6. 2 Multi-electrical parameters digital transmitters communication guide

4. 6. 2. 1 通讯

This chapter mainly describes how to use software through communication port to operate and control this transmitter. To grasp content in this chapter, you should have enough knowledge accumulation of MODBUS protocol, read and familiar with all content of this manual, and full understanding of functions and application concept of this product.

在本章主要讲述如何利用软件通过通讯口来控制该变送器。本章内容的掌握需要您具有MODBUS协议的知识储备并且通读了本册其它章节所有内容, 对本产品功能和应用概念有较全面了解。

本章内容包括: MODBUS协议简述, 通讯应用格式详解, 本机的应用细节及参量地址表。

This section covers: MODBUS protocol compendium, expounding communication apply formatting, details for applying this machine and parameter address table.

4. 6. 2. 2 MODBUS协议简述

4. 6. 2. 2 MODBUS protocol compendium

BD-3E(A)/BD-4E(A)多电量组合变送器使用的是MODBUS-RTU通讯协议, MODBUS协议

BD-3E(A)/BD-4E(A) multiple electric parameters combined transmitter use MODBUS-RTU communication protocol,

详细定义了校验码、数据序列等, 这些都是特定数据交换的必要内容。MODBUS协议在一根通讯线上使用主从应答式连接(半双工), 这意味着着在一根单独的通讯线上信号沿着相反的两个方向传输。首先, 主计算机的信号寻址到一台唯一的终端设备(从机), 然后, 终端设备发出的应答信号以相反的方向传输给主机。


MODBUS protocol define detailedly: check code, data sequence etc., these are necessary content for specific data exchange. MODBUS protocol use master/slave responding connection (half-duplex) on one communication line, this means on one separated communication line, signal transmit in opposite directions. Firstly, master computer signal addressed only one terminal device (slave), then, the reply signal sent by terminal device transmit to the master in opposite directions.

MODBUS协议只允许在主机(PC, PLC等)和终端设备之间通讯, 而不允许独立的终端设备之间的数据交换, 这样各终端设备不会在它们初始化时占据通讯线路, 而仅限于响应到达本机的查询信号。

MODBUS protocol only allow communication between the master (PC, PLC etc.) and terminal device, but not allow data exchange between independent terminal devices, so, each terminal device does not occupy communication line in the initialization, only respond query signal reach to the computer.

4.6.2.3 查询-响应周期

4.6.2.3 Query-respond period

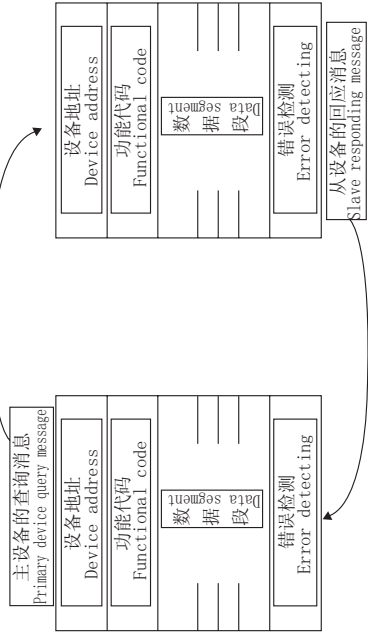

主-从 查询-响应周期表  
Master-slave query-respond period table

a) 查询

a) Query

查询消息中的功能代码告之被选中的从设备要执行何种功能。数据段包含了从设备要执行功能的任何附加信息。例如功能代码03是要求从设备保持寄存器并返回它们的内容。数据段必须包含要告之从设备的信息；从寄存器开始读及要读的寄存器数量。错误检测域为从设备提供了一种验证消息内容是否正确的方法。

The functional code of query message tells the selected slave device to implement what function. Data segment included any additional message implemented function by slave device. For example: functional code03 demand slave device to read holding register and return their content. The data segment must include message to be telling to slave device: the register starting read and register quantity to be read. Error detecting domain provide slave device with one method to verify the message content is correct or not.

b) 回应

b) Respond

如果从设备产生一正常的回应，在回应消息中的功能代码是在查询消息中的功能代码的回应。数据段包括了从设备收集的数据：如寄存器值或状态。如果有错误发生，功能代码将被修改以用于指出回应消息是错误的，同时数据段包含了描述此错误信息的代码。错误检测域允许主设备确认消息内容是否可用。

If slave device produce one normal respond, the functional code of respond message is enquiring the respond of functional code of query message. The data segment include data collected by slave device: such as register value or condition. If error occur, the functional code will be revised to indicate that the respond message is wrong, while the data segment include code describing this error message. Error detecting domain allow primary device to confirm message content is usable or not.

4.6.2.4 传输方式

传输方式是指一个数据帧内一系列独立的数 据结构以及用于传输数据的有限规则，下面定义了与MODBUS 协议- RTU方式相兼容的传输方式。

每个字节的位

- 1个起始位
- 8个数据位，最小的有效位先发送
- 无奇偶校验位
- 1个停止位

错误检测 (Error checking)

CRC (循环冗余校验)

4.6.2.4 Transmission mode

Transmission mode refer to one series of independent data structure, and limited regulation used for transmission data in one data frame, the transmission mode compatible with MODBUS protocol- RTU mode is defined as follows:

Bit of each byte:

- One start bit
- Eight data bit, least significance bit fir transmitting
- Non-Parity bit
- 1个 stop bit

Error detecting (Error checking)

CRC (cyclic redundancy check)

4.6.2.5 协议

4.6.2.5 Protocol

When Data frame reach terminal device, it enter addressed device by a simple “port”, this device remove Data frame “envelope” ( data head), read data, if there is no error, executing task requested by data, then, add the new produced data in the obtained “envelope”, return the data frame to the transmitter. Returned responding data include following content: slave terminal address (Address), executed command (Function), requested data produced by executing command (Data) and one CRC check code (Check). If any error occur, no successful responding or returning one error indication frame .

当数据帧到达终端设备时，它通过一个简单的“端口”进入被寻址到的设备，该设备去掉数据帧的“信封”（数据头），读取数据，如果没有错误，就执行数据所请求的任务，然后，它将自己生成的数据加入到取得的“信封”中，把数据帧返回给发送者。返回的响应数据中包含了以下内容：终端从机地址 (Address)、被执行了的命令 (Function)、执行命令生成的被请求数据 (Data) 和一个校验码 (Check)。发生任何错误都不会有成功的响应，或者返回一个错误指示帧。

a) 数据帧格式

a) Protocol

地址 Address	功能 Function	数据 Data	校验 Check
8-Bits	8-Bits	N x 8-Bits	16-Bits

b) 地址域

b) Address domain

地址域在帧的开始部分，由一个字节（8位二进制码）组成，十进制为0~255，在我们的系统中只使用1~247，其它地址保留。这些位标明了用户指定的终端设备的地址，该设备将接收来自与之相连的主机数据。每个终端设备的地址必须是一致的，仅仅被寻址到的终端会响应包含了该地址的查询。当终端发送回一个响应，响应中的从机地址数据便告诉了主机哪台终端正与之进行通信。

Address domain is located at beginning of frame, composed of one byte (8 bit binary system domain), decimal system is 0~255, in the ACR meters, just 1~247 is used, other address is Reserved. these bits indicate terminal device address specified by users, this device will receive the connecting host computer data. Every terminal device has its only one address, only the addressing this terminal is responding enquiry including this address. When terminal is Transmitting one responding, the responding slave address data tell host computer that which terminal is communicating with it.

c) 功能域

c) Function domain

功能域代码告诉了被寻址到的终端执行何种功能。下表列出了该变送器用到的功能码，以及它们的意义和功能。

Function domain tell the addressed terminal to execute what function. Below table list: function domain used in this Series meters, and their meaning and function.

代码 Code	意义 Meaning	行为 Action
03	读数据寄存器 Read data register	获得一个或多个寄存器的当前二进制制值 Obtain current binary value of one or multiple register
16	预置多寄存器 Preset multi-register	设定二进制制值到一系列多寄存器中 Set binary value into a series of multiple register

d) 数据域

数据域包含了终端执行特定功能所需要的数据或者终端响应查询时采集到的数据。这些数据的内容可能是数值、参考地址或者设置值。例如：功能域码告诉终端读取一个寄存器，数据域则需要指明从哪个寄存器开始及读取多少个数据，内嵌的地址和数据依照类型和从机之间的不同内容而有所不同。

d) Data domain

Data field is including the data needed by terminal for executing specific function, or the collected data when terminal is responding enquiry. Content of these data may be value, reference address or setting value. For example: The function domain tell terminal to Read one register, the data field need to specify the starting register and Read how many data, the built-in address and data have different content depending on type and slave computer.

e) 错误校验域

e) Error check field

该域允许主机和终端检查传输过程中的错误。有时，由于电噪声和其它干扰，一组数据在从一个设备传输到另一个设备时在线路上可能会发生一些改变，出错校验能够保证主机或者终端不去响应那些传输过程中发生了改变的数据，这就提高了系统的安全性和效率，错误校验使用了16位循环冗余的方法（CRC16）。

This field allows the error in checking and transmitting of host computer and terminal. Due to electric noise and other interfere, when one group of data is transmitting from one device to another device, on the transmitting line, some change may be produced. The error check can enable the host computer or terminal not responding those changed data, so, safety, reliability and efficiency of system are upgraded. It used 16 bit Cyclic Redundancy Check (CRC16).

#### 4.6.2.6 错误检测的方法

错误校验 (CRC) 域占用两个字节, 包含了一个16位的二进制值。CRC值由传输设备计算出, 然后附加到数据帧上, 接收设备在接收数据时重新计算CRC值, 然后与接收到的CRC域中的值进行比较, 如果这两个值不相等, 就发生了错误。

#### 4.6.2.6 Method to create error check code (CRC)

Error check (CRC) domain occupy 2 byte, including one 16 bit binary system value. CRC value is calculated by transmission device, then attached to the data frame, the receiving device, while receiving, it calculates the CRC value again, then comparing it with the receiving CRC domain value, if these two values is not equal, it shows a error occurs.

CRC运算时, 首先将一个16位的寄存器预置为全1, 然后连续把数据帧中的每个字节中的8位与该寄存器的当前值进行运算, 仅仅每个字节的8个数据位参与生成CRC, 起始位和终止位以及可能使用的奇偶位都不影响CRC。在生成CRC时, 每个字节的8位与寄存器中的内容进行异或, 然后将结果向低位移位, 高位则用“0”补充, 最低位 (LSB) 移出并检测, 如果是1, 该寄存器就与一个预设的固定值 (0A001H) 进行一次异或运算, 如果最低位为0, 不作任何处理。

When operating, firstly, preset one 16-bit register as All-1, then continuously operating each byte 8 bit of Data frame and current value of this register, only every 8 data bit of each byte to participate in forming CRC the start bit and stop bit and usable parity bit have no affect on the CRC. When forming CRC, every 8 data bit of each byte and content of register carry out exclusive or operation, then shift the result to the low bit the high bit is filled with 0, shift out the least significant bit (LSB) is shifted out and tested, if it is 1, this register and one preset fixed value (0A001H) carry out one exclusive or operation, if the least significant bit is 0, no treating is needed.

上述处理重复进行, 直到执行完了8次移位操作, 当最后一位 (第8位) 移完以后, 下一个8位字节与寄存器的当前值进行异或运算, 同样进行上述的另一个8次移位异或操作, 当数据帧中的所有字节都作了处理, 生成的最终值就是CRC值。

生成一个CRC的流程为:

1、预置一个16位寄存器为0FFFFH (全1),

称之为CRC寄存器。

2、把数据帧中的第一个字节的8位与CRC寄存器中的低字节进行异或运算, 结果存回CRC寄存器。

3、将CRC寄存器向右移一位, 最高位填以0, 最低位移出并检测。

4、如果最低位为0: 重复第三步 (下一次移位); 如果最低位为1: 将CRC寄存器与一个预设的固定值 (0A001H) 进行异或运算。

5、重复第三步和第四步直到8次移位。这样处理完了一个完整的八位。

6、重复第2步到第5步来处理下一个八位, 直到所有的字节处理结束。

7、最终CRC寄存器的值就是CRC的值。

此外还有一种利用预设的表格计算CRC的方法, 它的主要特点是计算速度快, 但是表格需要较大的存储空间, 该方法此处不再赘述, 请参阅相关资料。

The above said processing is performed repeatedly, until finishing shift operation for times, after the last bit (8th bit) is shifted, next 8 bit byte and register current value carry out exclusive or operation, after all byte of data frame have been treated, the result final value is CRC value.

Flow for forming one CRC:

1、Preset one 16 bit register as 0FFFFH (All-1), called as CRC register.

2、8 bit of data frame first byte and low byte of CRC register carry out exclusive or operation, then save its result back to CRC register.

3、Right shift CRC register for one bit, the most significant bit is filled with 0, the least significant bit is shifted out and tested.

4、If the least significant bit is 0, Repeat the third step (next shift); If the least significant is 1, CRC register and preset fixed value specified (0A001H) carry out exclusive or operation.

5、Repeat the third step and the fourth step until shift for 8 times, the complete 8 bit is done

6、Repeat the second step to the fifth step to treat next 8 bit until all the byte is treated

7、The CRC register final value is CRC value.

Besides, there is another CRC calculation method by preset table, its main feature is fast calculating speed, but large saving space is needed, please refer to related data.

4.6.2.7 通讯应用格式详解

本书所举实例将尽可能的使用如图图所示的格式，（数字为16进制）。

4.6.2.7 Communication apply format expound

Example used in this section possibly adopt format shown in below diagram, (digital as Hex) .

从机地址 Addr	功能码 Fun	数据起始地址 寄存器高字节 Data start Reg Hi	数据起始地址 寄存器低字节 Data start Reg Lo	循环冗余校验 低字节 Data # of Regs Hi	循环冗余校验 高字节 Data # of Regs Lo	数据读取个数 寄存器高字节 Data # of Regs Lo	数据读取个数 寄存器低字节 CRC16 Lo	循环冗余校验 高字节 CRC16 Hi	CBH
01H	03H	00H	00H	00H	03H	03H	05H	CBH	

a) 读数据（功能码03）

■ 查询数据帧

此功能允许用户获得设备采集与记录的数据及系统参数。主机一次请求的数据个数没有限制，但不能超出定义的地址范围。

下面的例子是从01号从机读3个采集到的基本数据（数据帧中每个地址占用2个字节）UA、UB、UC，其中UA的地址为0025H，UB的地址为0026H，UC的地址为0027H。

从机地址 Addr	功能码 Fun	数据起始地址 寄存器高字节 Data start Addr Hi	数据起始地址 寄存器低字节 Data start Addr Lo	数据读取个数 寄存器高字节 Data # of Regs Hi	数据读取个数 寄存器低字节 Data # of Regs Lo	循环冗余校验 低字节 CRC16 Lo	循环冗余校验 高字节 CRC16 Hi
01H	03H	00H	25H	00H	03H	14H	00H

a) Read data (function code03)

■ Query data frame

This function allows user to obtain data and system parameter collected and recorded by device. The data number every requested by host computer have no limit, but must not exceed the defined Address range .

Below example is three basic data collected from reading No.01 slave (each Address of data frame occupy 2 byte) UA、UB、UC, thereinto UA's Address is 0025H, UB's Address is 0026H, UC's Address is 0027H .

■ 响应数据帧

响应包含从机地址、功能码、数据的数量和CRC错误校验。

下面的例子是读取UA、UB、UC (UA=082CH, UB=082AH, UC=082CH)的响应。

从机地址 Addr	功能码 Fun	字节计数 Byte count	数据1高字节 Data1 Hi	数据1低字节 Data1 Lo	数据2高字节 Data2 Hi	数据2低字节 Data2 Lo	数据3高字节 Data3 Hi	数据3低字节 Data3 Lo	循环冗余校验 高字节 CRC16 Hi	循环冗余校验 低字节 CRC16 Lo
01H	03H	06H	08H	2CH	08H	2AH	08H	2CH	94H	4EH

■ 错误指示码

如果主机请求的地址不存在则返回错误指示码：FFH。

■ Error indicating code

If the Address requested by host computer is inexistence, then return to Error indicating code: FFH.

b) 预置多寄存器（功能码16）

■ 查询数据帧

功能码16允许用户改变多个寄存器的内容，该变速器中系统参数、电度量可用此功能号写入。主机一次最多可以写入16个（32字节）数据。

下面的例子是预置01号从机吸收有功电度（正有功电度）EP\_imp为178077833wh。16进制为0A9D4089H。EP\_imp的地址是003FH、0040H，EP\_imp占用32位，共4个字节。

computer, the most data number once written in is 16 (32byte).  
Below example is that preset No.01 slave absorptive active electric energy (Positive active electric energy)EP\_imp as 178077833wh .Hex as 0A9D4089H. EP\_imp Address is 003FH, 0040H, EP\_imp occupy 32 byte, total of 4个 bytes.

地址 Addr	功能码 Fun	起始数据 寄存器高字节 Data Start reg Hi	起始数据 寄存器低字节 Data start reg Lo	数据读取个数 寄存器高字节 Data #of regs Hi	数据读取个数 寄存器低字节 Data #of regs Lo
01H	10H	00H	3FH	00H	02H



高字节数据 Value hi	低字节数据 Value lo	高字节数据 Value hi	低字节数据 Value lo	CRC 低字节 CRC lo	CRC 高字节 CRC hi
0AH	9DH	40H	89H	38H	91H

■ 响应数据帧

对于预置单寄存器请求的正常响应是在寄存器值改变以后回应机器地址、功能号、数据起始地址、数据个数、CRC校验码。如图。

■ Respond data frame

Normal Respond for request of preset single register is that after register value changed, respond the machine Address, data function number, Data start Address, data number, CRC check code. Shown as below diagram.

地址 Addr	功能码 Fun	起始数据 寄存器高字节 Data start reg hi	起始数据 寄存器低字节 Data start reg lo	字节数 Bytecount	CRC16 低字节 CRC16 lo	CRC16 高字节 CRC16 hi
01H	10H	00H	3FH	04H	0DH	33H

■ 错误指示码

如果主机请求的地址不存在或数据个数不正确则返回错误指示码：FFH。

■ Error indicating code

If the Address requested by host computer is inexistence, or data number is not correct, then return to Error indicating code: FFH.

4.6.2.8 多电量组合变送器的应用细节及参量地址表

该变送器的测量值用Modbus-RTU 通讯规约的03号命令读出。

通讯值与实际值之间的对应关系如下表：(约定Val\_t为通讯读出值, Val\_s为实际值)

通用参数 Applicable parameter	对应关系 Congruent relationship	单位 Unit/Volt
电压值UA、UB、UC Voltage value UA、UB、UC	$Val_s = (Val_t / 10000) * (10^6 DPT)$	伏(V) (V)
电流值IA、IB、IC Current Value IA、IB、IC	$Val_s = (Val_t / 10000) * (10^6 DCT)$	安培(A) Ampere (A)
功率值PA、PB、PC、PS、QA、QB、QC、QS Power Value PA、PB、PC、PS、QA、QB、QC、QS	$Val_s = (Val_t / 10000) * (10^6 DPQ)$	瓦(w) Watt (w) 乏(var) Var (varh)
电度量一次侧值EpI、EpE、EqL、EqC Electric energy quantity primary side value EpI、EpE、EqL、EqC	$Val_s = Val_t * PT * CT$	瓦时(wh) Watt-hour (wh) 乏时(varh) Var-hour (varh)
功率因数数值PFA、PFB、PFC、PFS Power factor Value PFA、PFB、PFC、PFS	$Val_s = Val_t / 1000$	无单位 No-unit
频率FR Frequency FR	$Val_s = Val_t / 100$	赫兹(Hz) Hertz (Hz)

范例：UA的通讯读出值为08C6H(2246)，DPT为5，则UA的实际值

$$Va = (2246 / 10000) * (10^5) = 22.46KV。$$

IA的通讯读出值为0FA0H(4000)，DCT为3，则IA的实际值

$$Ia = (4000 / 10000) * (10^3) = 400.0A$$

Example: UA's communication Read-out Value is 08C6H(2246), DPT is 5, then UA's actual Value

$$Va = (2246 / 10000) * (10^5) = 22.46KV。$$

IA's communication Read-out Value is 0FA0H(4000), DCT is 3, then IA's actual Value

$$Ia = (4000 / 10000) * (10^3) = 400.0A。$$

## 多电量组合变送器参量地址表

## Multiple electric parameters combined transmitter parameter Address table

地址 Address	参量 Parameter	读写属性 Read/Write	数值范围 Data range	10H功能码写 Function code Writing	数据类型的 Data Type
0000H	保护密码 Protective password	R/W	0001~9999		Word
0001H 高字节 0001H High byte	通讯地址 Communication Address	R/W	0001~0247		Word
0001H 低字节 0001H Low byte	通讯波特率 Communication Baud rate	R/W	0~3对应38400、19200、9600、4800bps 0~3 corresponding to 38400、19200、9600、4800bps		Word
0002H	控制字 Control word	R/W	第8位-接线方式(0-三相四线, 1-三相三线); 第7位-输入电压范围(0-400V, 1-100V); 第2位-输入电流范围(0-5A, 1-1A) 8th bit-connection mode(0- four wire three phase, 1- three phase three wire); 7th bit- input voltage range (0-400V, 1-100V); second bit-input current range (0-5A, 1-1A)		Word
0003H	PT变比 PT Transformation ratio	R/W	1~9999		Word
0004H	CT变比 CT Transformation ratio	R/W	1~9999		Word
0005H-0022H	保留 Reserved				
0023H高字节 0023H high byte	小数点U(DPT) Decimal point U(DPT)	R			Word
0023H低字节 0023H low byte	小数点I(DCT) Decimal point I(DCT)	R			Word
0024H高字节 0024H high byte	小数点PQ(DPPQ) Decimal point PQ(DPPQ)	R			Word
0024H低字节 0024H low byte	符号PQ Symbol PQ	R			Word
0025H	相电压UA Phase voltage UA	R	0-65535		Word
0026H	相电压UB Phase voltage UB	R	0-65535		Word
0027H	相电压UC Phase voltage UC	R	0-65535		Word
0028H	线电压UAB Line voltage UAB	R	0-65535		Word
0029H	线电压UBC Line voltage UBC	R	0-65535		Word
002AH	线电压UAC Line voltage UAC	R	0-65535		Word
002BH	电流IA Current IA	R	0-65535		Word
002CH	电流IB Current IB	R	0-65535		Word
002DH	电流IC Current IC	R	0-65535		Word
002EH	分相有功功率PA Phase splitting active power PA	R	-32768-32768		Integer

002FH	分相有功功率PB Phase splitting active power PB	R	-32768-32768		Integer
0030H	分相有功功率PC Phase splitting active power PC	R	-32768-32768		Integer
0031H	总有功功率P Total active power P	R	-32768-32768		Integer
0032H	分相无功功率QA Phase splitting reactive power QA	R	-32768-32768		Integer
0033H	分相无功功率QB Phase splitting reactive power QB	R	-32768-32768		Integer
0034H	分相无功功率QC Phase splitting reactive power QC	R	-32768-32768		Integer
0035H	总无功功率Q Total reactive power Q	R	-32768-32768		Integer
0036H	分相功率因数PFA Phase splitting power factor PFA	R	-1000-1000		Integer
0037H	分相功率因数PFB Phase splitting power factor PFB	R	-1000-1000		Integer
0038H	分相功率因数PFC Phase splitting power factor PFC	R	-1000-1000		Integer
0039H	总功率因数PF Total power factor PF	R	-1000-1000		Integer
003AH	分相视在功率SA Phase splitting Apparent power SA	R	0-65535		Word
003BH	分相视在功率SB Phase splitting Apparent power SB	R	0-65535		Word
003CH	分相视在功率SC Phase splitting Apparent power SC	R	0-65535		Word
003DH	总视在功率S Total Apparent power S	R	0-65535		Word
003EH	频率FR Frequency FR	R	4500-6000		Word
003FH-0040H	吸收有功电度EP_imp二次侧 Absorptive active electric energy EP_imp secondary side	R/W	0-9999999999		Dword
0041H-0042H	释放有功电度EP_exp二次侧 Release active electric energy EP_exp secondary side	R/W	0-9999999999		Dword
0043H-0044H	感性无功电度EQ_imp二次侧 Inductive reactive electric energy EQ_imp secondary side	R/W	0-9999999999		Dword
0045H-0046H	容性无功电度EQ_exp二次侧 Capacitive reactive electric energy EQ_exp secondary side	R/W	0-9999999999		Dword
0047H-0048H	吸收有功电度EPI一次侧 Absorptive active electric energy EPI primary side	R			Fword
0049H-004AH	释放有功电度EPE一次侧 Release active electric energy EPE primary side	R			Fword
004BH-004CH	感性无功电度EqL一次侧 Inductive reactive electric energy EqL primary side	R			Fword
004DH-004EH	容性无功电度EqC一次侧 Capacitive reactive electric energy EqC primary side	R			Fword

几点说明:

1 数据类型:“BYTE”指1个字节;“word”指16位无符号整数;“Integer”指16位有符号整数;“Dword”指32位无符号整数,“Fword”指32位浮点数。

2 读写属性:“R”只读,读参量用03H号命令;“R/W”可读可写,写系统参量用10H号命令。禁止向未列出的或不具可写属性的地址写入。

3 波特率的设定范围4800bps,9600bps,19200bps,38400bps。在此范围外的设定是不允许的。如果写入超范围的设定值,变送器会启用默认波特率:38400bps。

4 电度一次侧时的值采用浮点变量数据类型。它用符号表示数的符号,用阶码和尾数表示数的大小。变送器采用的数据格式为IEEE754数据格式具有24位精度,尾数的高位始终为“1”,因而不保存,位的分布如下

- a) 1位符号位;
- b) 8位指数位;
- c) 23位尾数。

符号位是最高位,尾数为最低的23位,按字节描述如下:

地址 Address	+0	+1	+2	+3
内容 Content	SEEE EEEE	EMMM MMMM	MMMM MMMM	MMMM MMMM

Instructions:

1 Data type: "BYTE"=one byte;"word"=16 bit unsigned integer; "Integer"=16 bit signed integer; "Dword"=32 bit unsigned integer,"Fword"=32 bit floating point numbers.

2 Read / Write Properties: "R"=Read only, Read parameter use 03H Command;"R/W"=Readable/Writable, Write system parameter use 10H Command. Prohibit write in Address, which is not listed or without writable properties.

3 Baud rate setting range:4800 bps, 9600 bps,19200 bps, 38400 bps. Settings outside this range are not allowable. If setting go beyond this range is write-in, transmitter can enable the default Baud rate: 38400 bps.

4 Electric energy primary side value adopt floating point variable data type.It use sign bit to show number sign, use biased exponent and mantissa to show larger and smaller numbers. Data format adopted by transmitter is IEEE754, with 24 bit precision, high bit of mantissa is always"1", thus, Don't Save, bit distribution is shown as following:

- a) 1 bit as sign bit;
- b) 8 bit exponents bit;
- c) 23 bit mantissa.

Sign bit is the highest bit, mantissa is the lowest 23 bit, the description based on byte is shown as follows:

其中, S: 符号位, 1表示负, 0表示正;

E: 阶码 (在两个字字节中) 偏移为127;

M: 23位尾数, 最高位为“1”。

Thereinto, S: Sign bit, 1 shows negative, 0 shows positive;

E: biased exponent (in two bytes) biased 127;

M: 23 bit mantissa, its highest bit is "1".

具体举例如下:

读出0 10001110 100 1011 1010 1100 0000 0000B

0 代表符号位,“1”为负,“0”为正; 10001110为计算指数, 设为a, a为10进制, a为142;

100 1011 1010 1100 0000 0000 为计算尾数, 设为b, b为10进制, b为4959232。

For example:  
Read-out 0 10001110 100 1011 1010 1100 0000 0000B

0 shows sign bit, "1"negative, "0"positive; 10001110=gage index, set it to a, a is decimal system,a=142;

100 1011 1010 1100 0000 0000 is computing mantissa, set it to b, b is decimal system, b=4959232.

计算公式:

Computing formula:

$$\text{Primary side electric parameters} = (-1)^s \times 2^{(E-127)} \times \left(1 + \frac{M}{2^{23}}\right)$$

上例计算结果为:


Computed result:

$$= (-1)^0 \times 2^{(142-127)} \times \left(1 + \frac{4959232}{2^{23}}\right) = 52140$$

**5 接线实例 Connection example**


5.1 BD-AI 接线实例

5.1 BD-AI Connection example

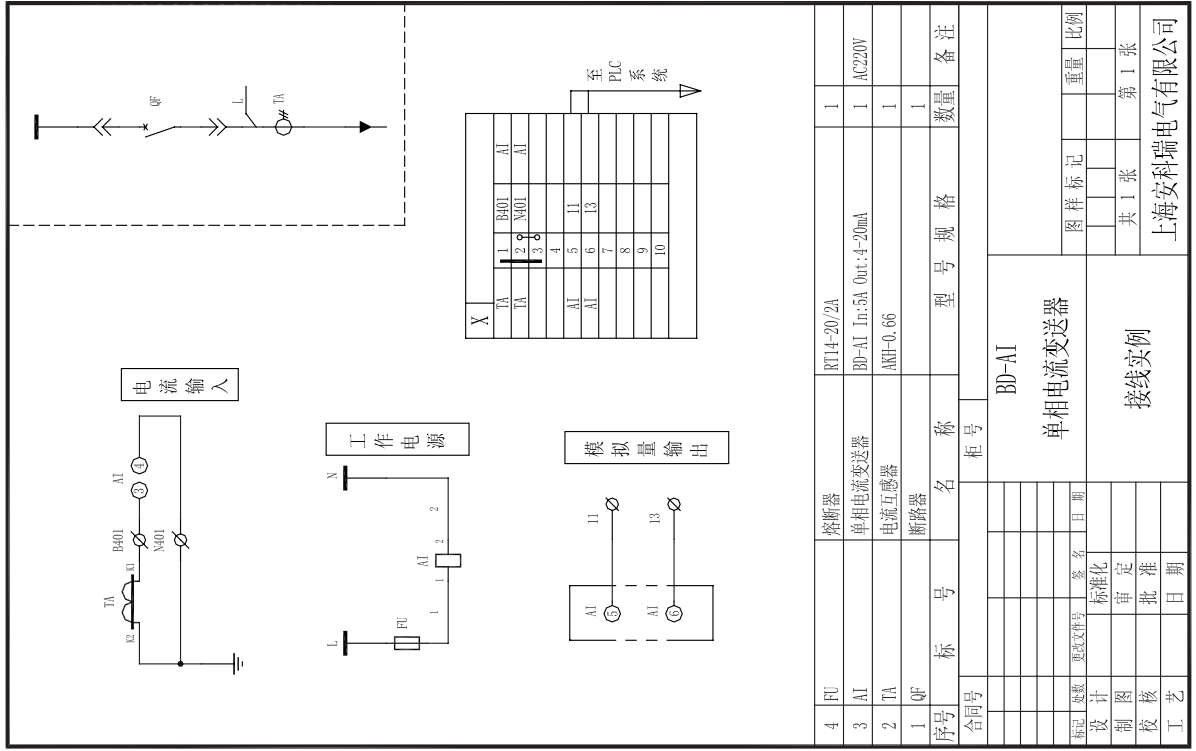


5.2 BD-3I3 接线实例

5.2 BD-3I3 Connection example

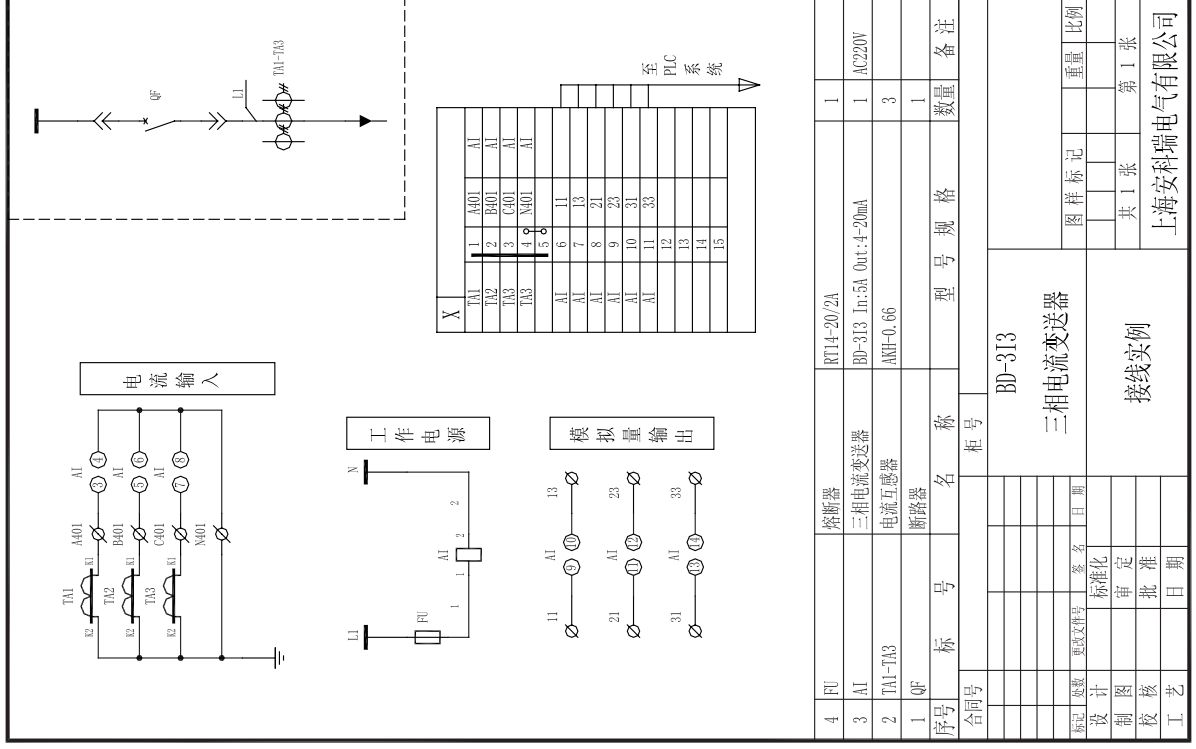


5.3 BD-3V3 接线实例

5.3 BD-3V3 Connection example

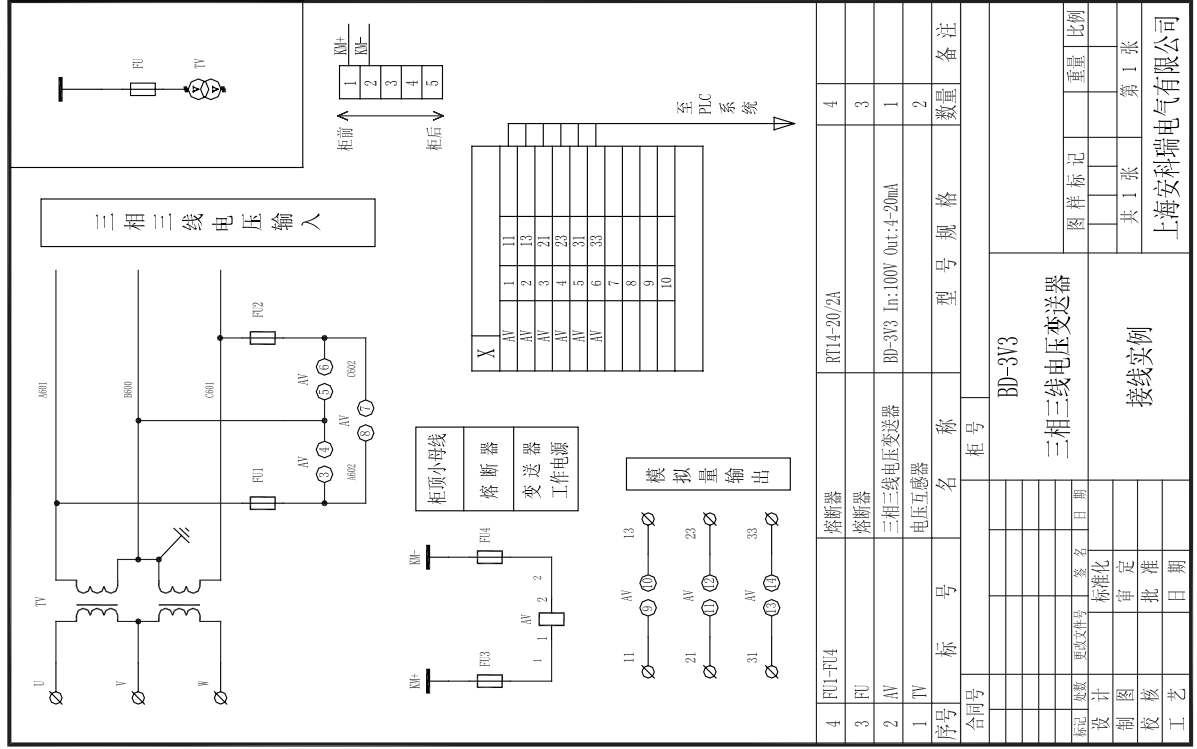

5.4 BD-PF 接线实例


5.4 BD-PF Connection example

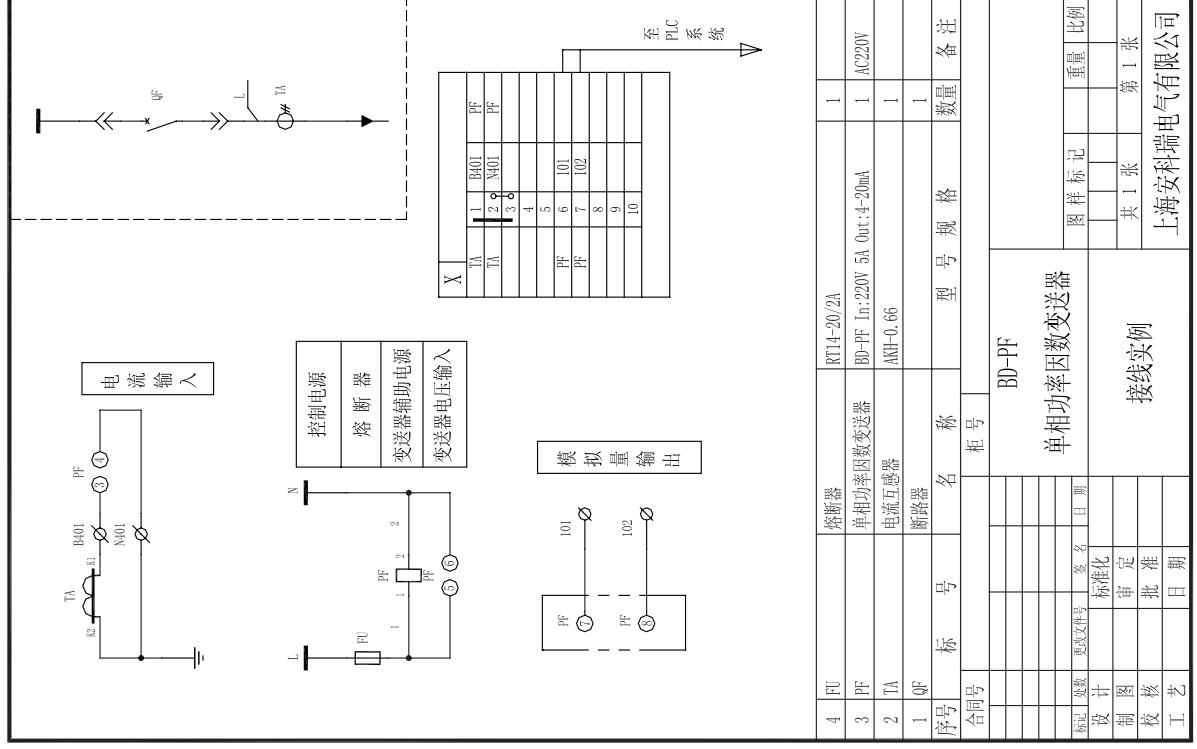



5.5 BD-4P 接线实例

5.5 BD-4P Connection example

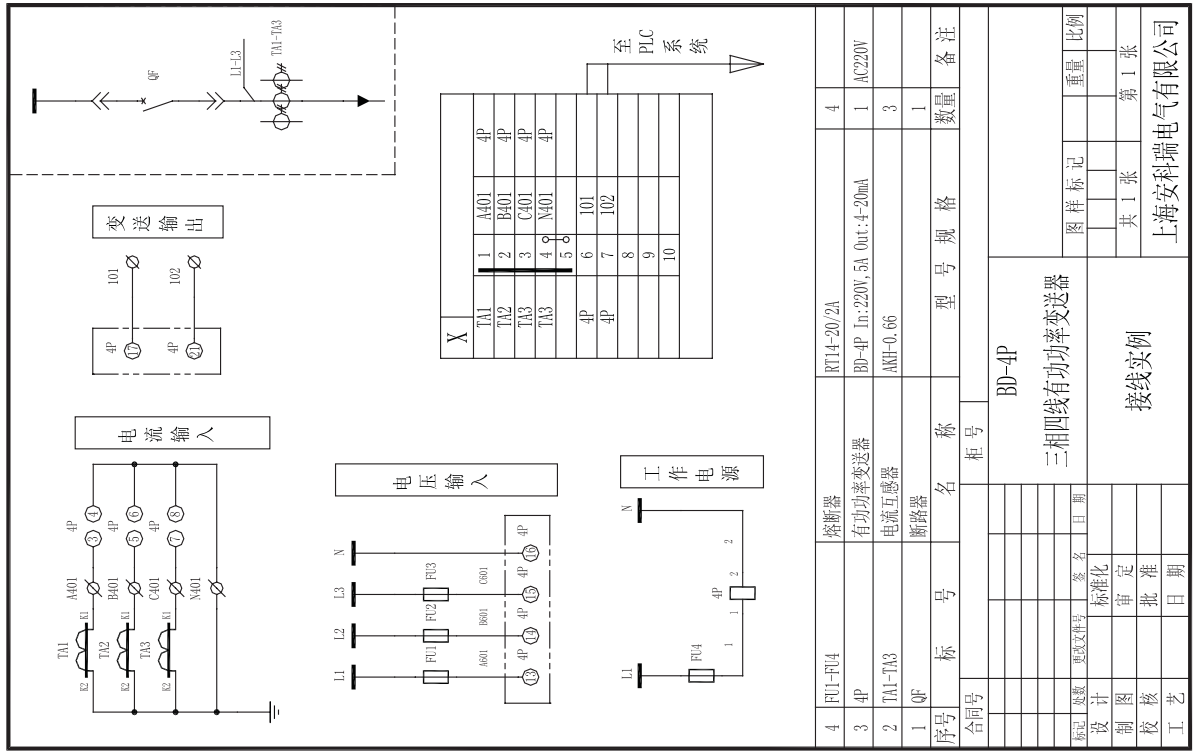

5.6 BD-4E 接线实例

5.6 BD-4E Connection example

